

Unit Assembly

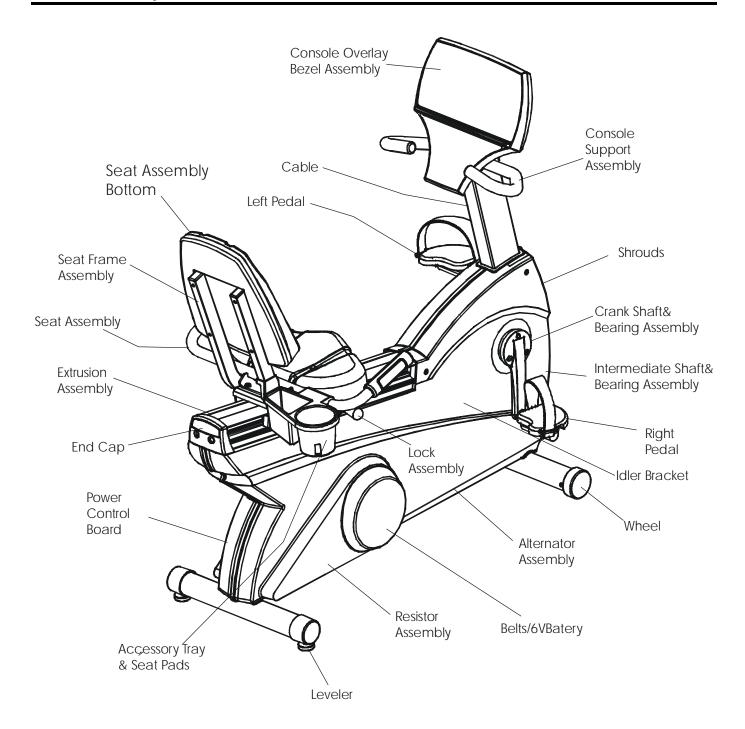


Operation Manual	M051-00K20-B406
Service Manual	M051-00K39-A012

Console Overlay Bezel Assembly

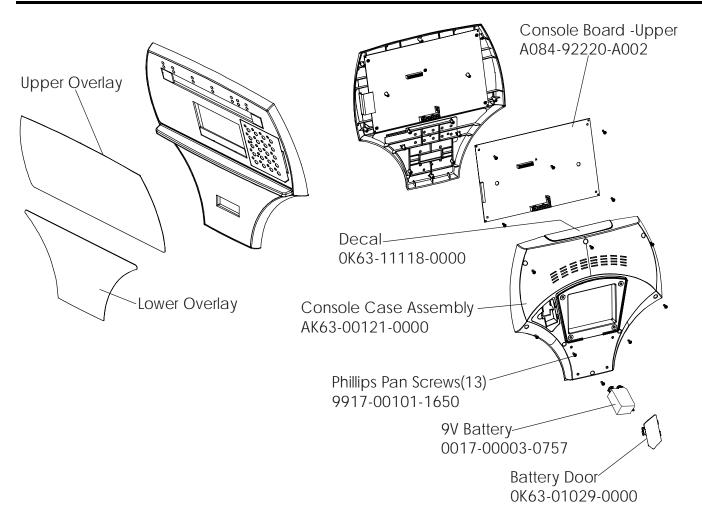


LC R7 Recumbent		
Console Assembly	Overlay Bezel	
AK39-00058-0001 Eng Met	AK63-00082-0001 Eng Met	
AK39-00058-0003 Ger Met	AK63-00082-0003 Ger Met	
AK39-00058-0004 Spn Met	AK63-00082-0004 Spn Met	
AK39-00058-0006 Jap Met	AK63-00082-0006 Jap Met	
AK39-00058-0007 Frn Met	AK63-00082-0007 Frn Met	
AK39-00058-0008 Itl Met	AK63-00082-0008 Itl Met	
AK39-00058-0009 Itl Met	AK63-00082-0009 Itl Met	
AK39-00058-0010 Por Met	AK63-00082-0010 Por Met	


Console Support Assembly

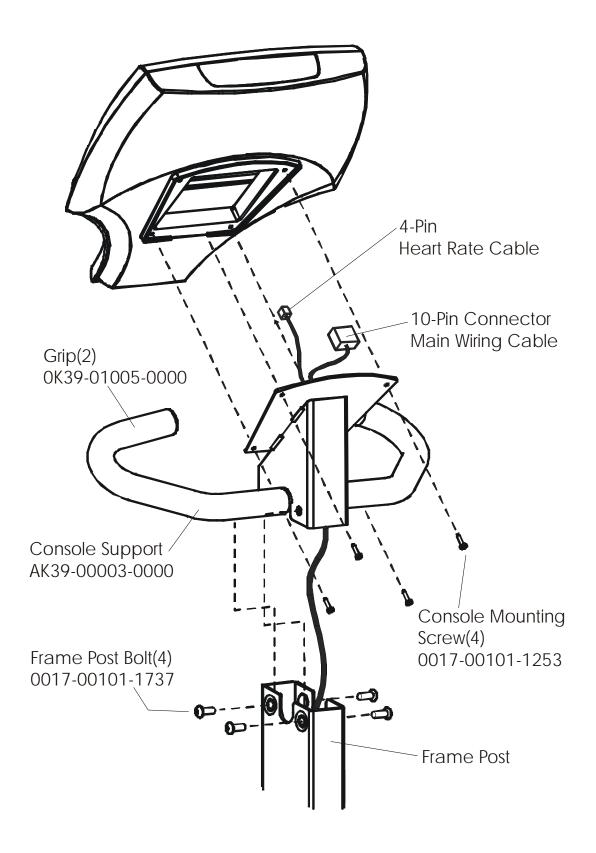


Shrouds, End Cap, and Pedals

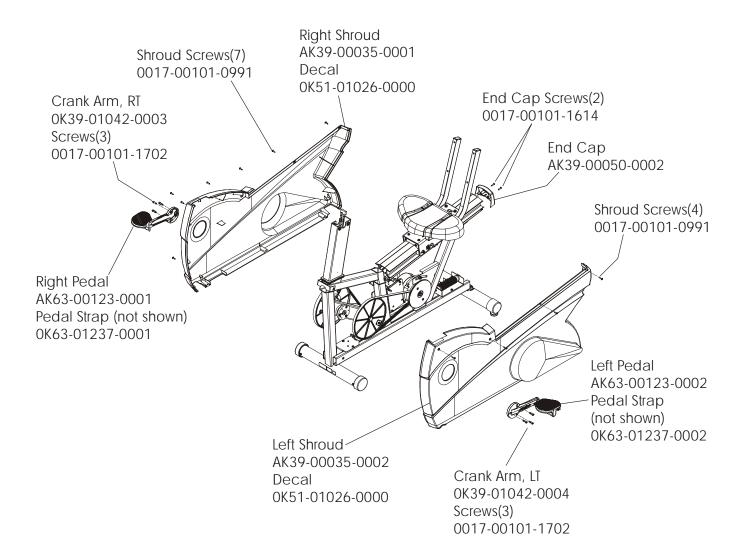


Wheel and Leveler

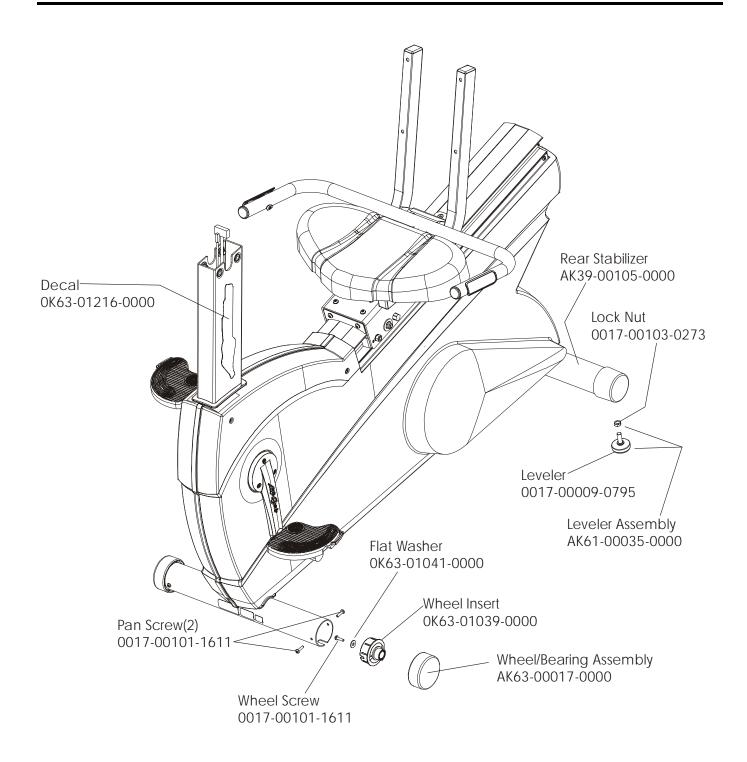


Belts and 6V Battery

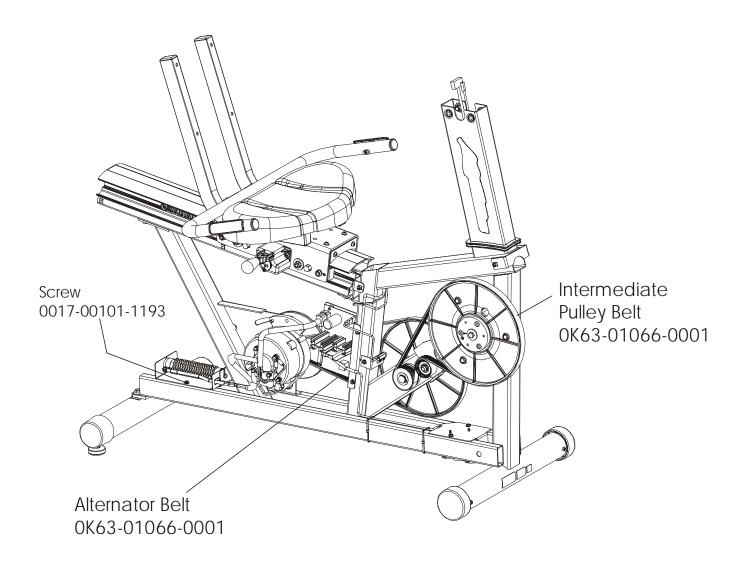


Resistor Assembly

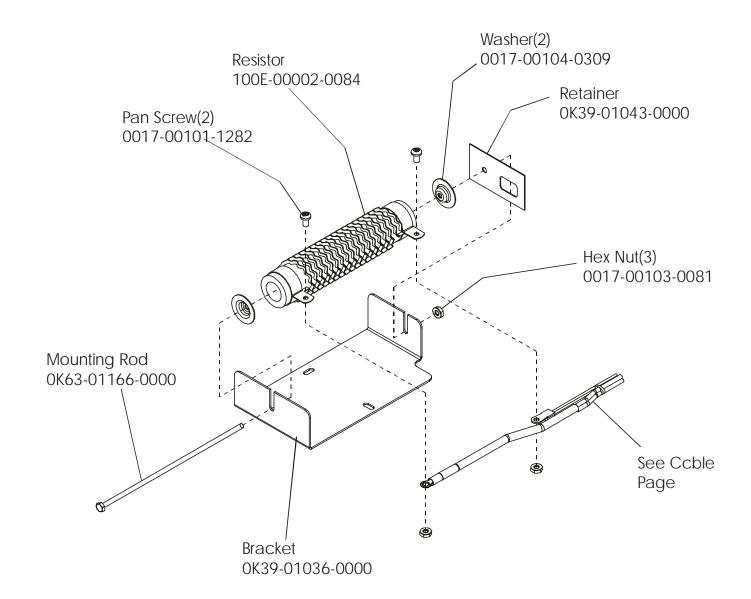


Power Control Board - AK39-00022-0002

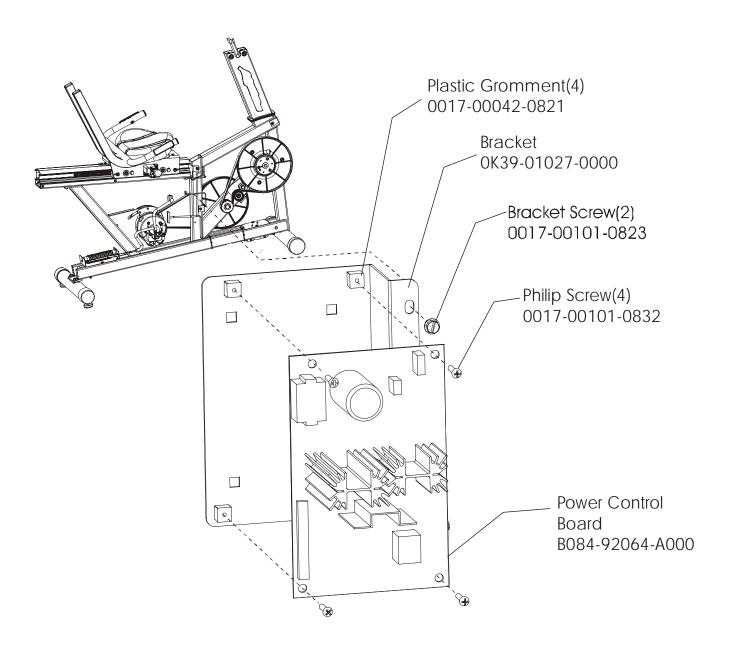


Alternator w/Pulley - AK63-00093-0000

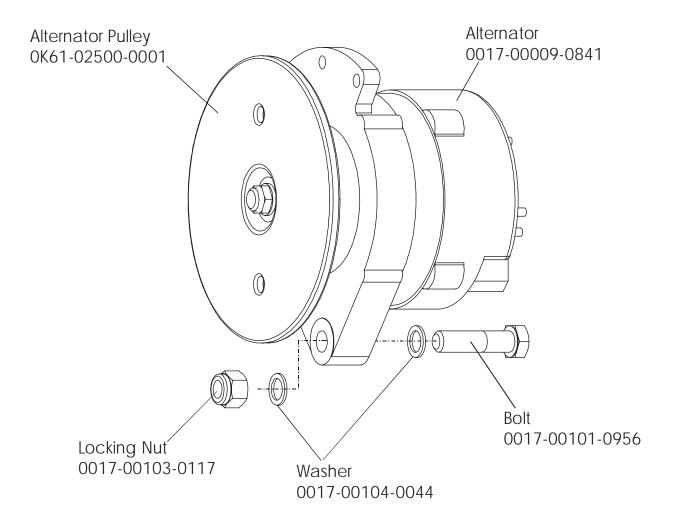


Crank Shaft and Bearing Assembly

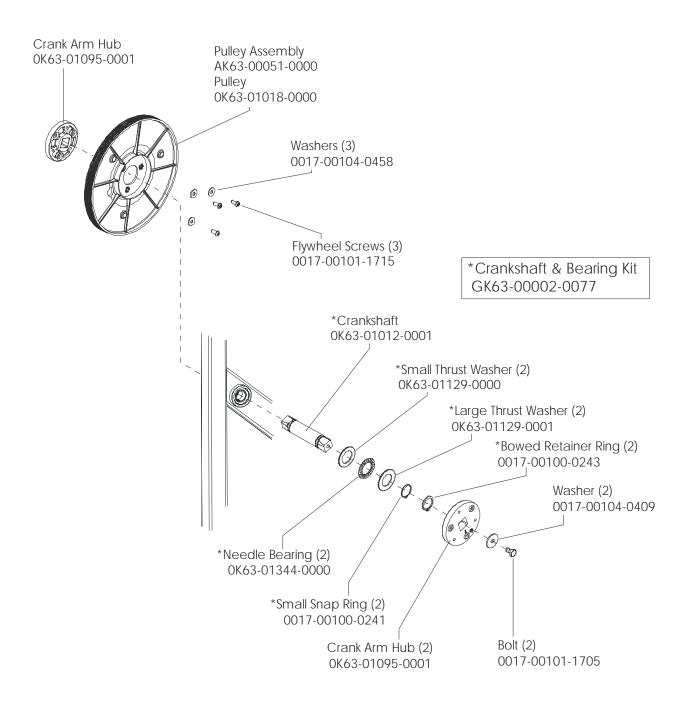


Intermediate Shaft and Bearing Assembly – GK63-00002-0007 Kit

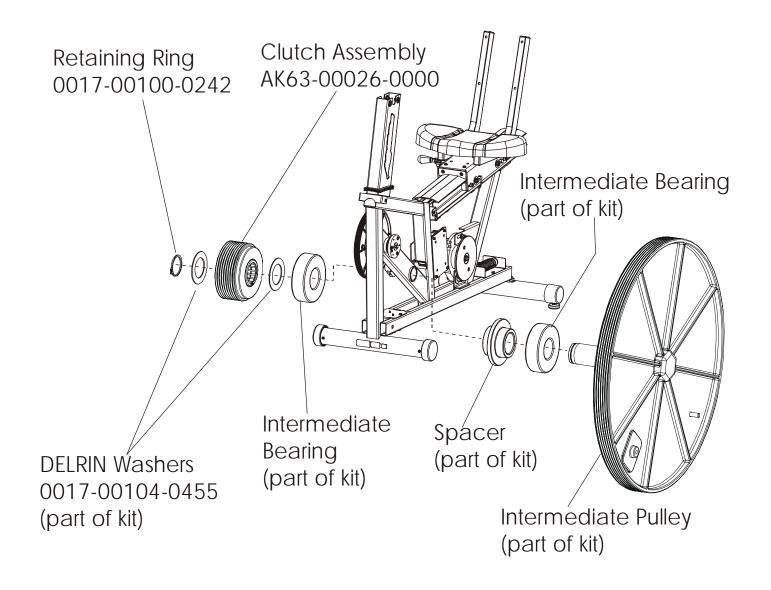


Idler Bracket Assembly - AK63-00021-0000

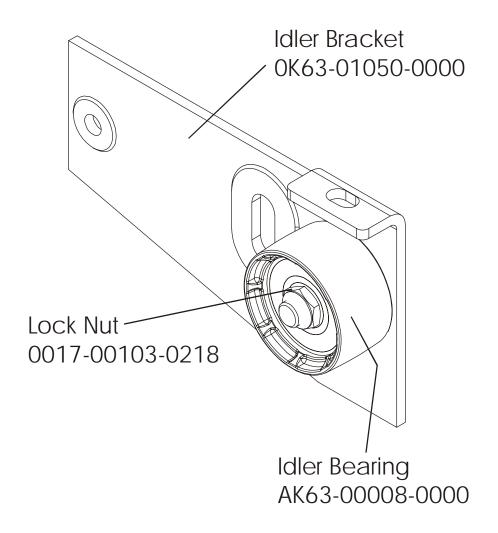


Seat Assembly

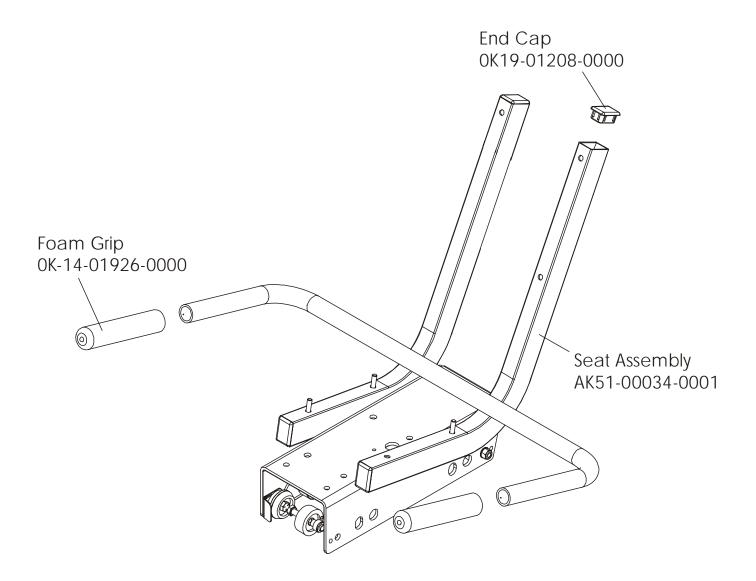


Seat Assembly - Bottom

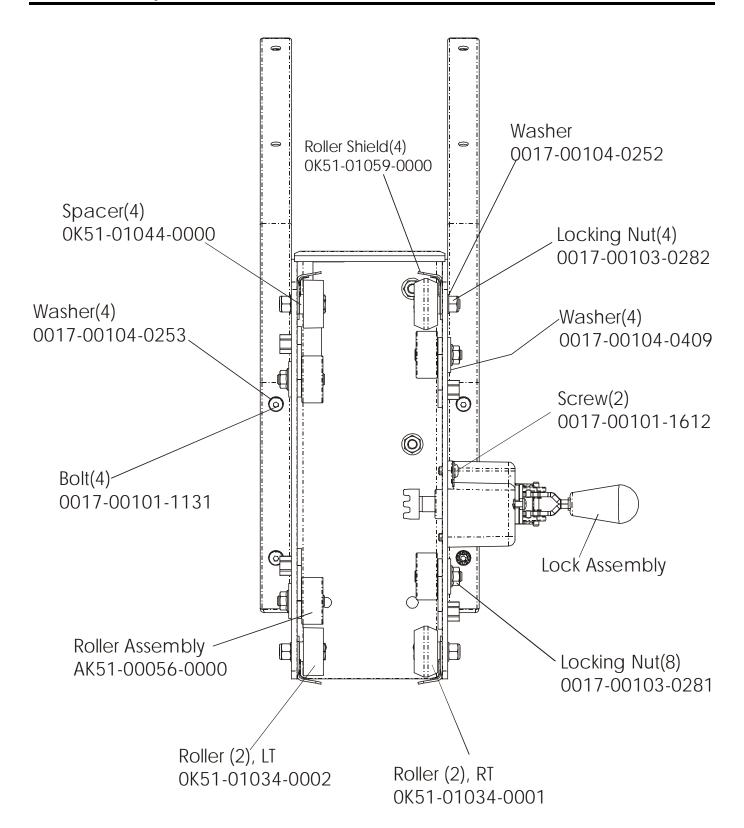


Seat Frame Assembly

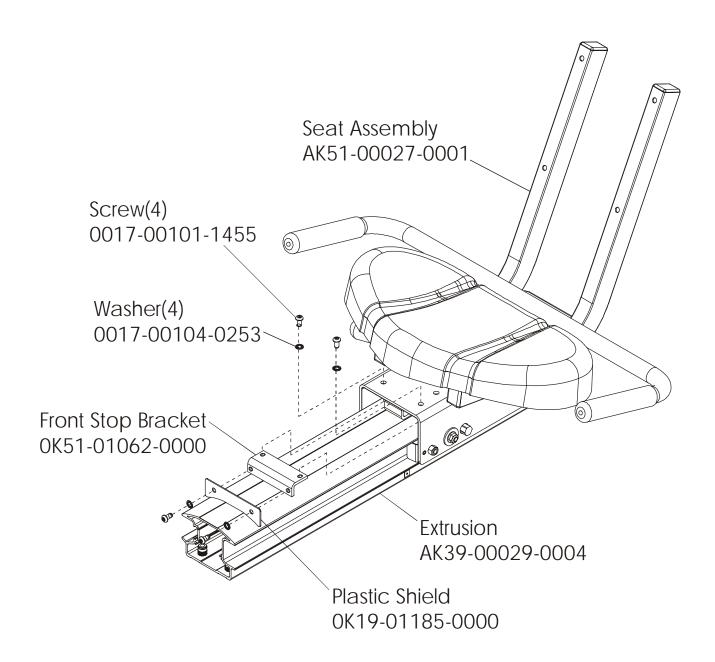


Seat Pads and Accessory Tray

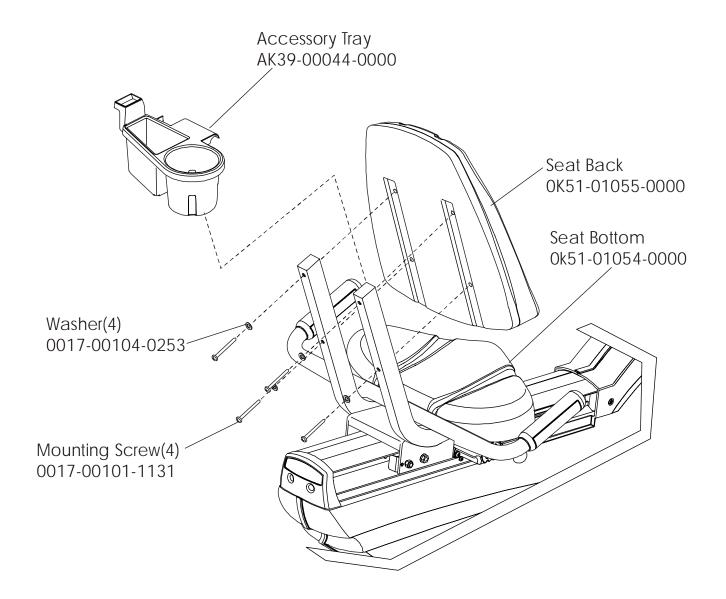

Extrusion Assembly

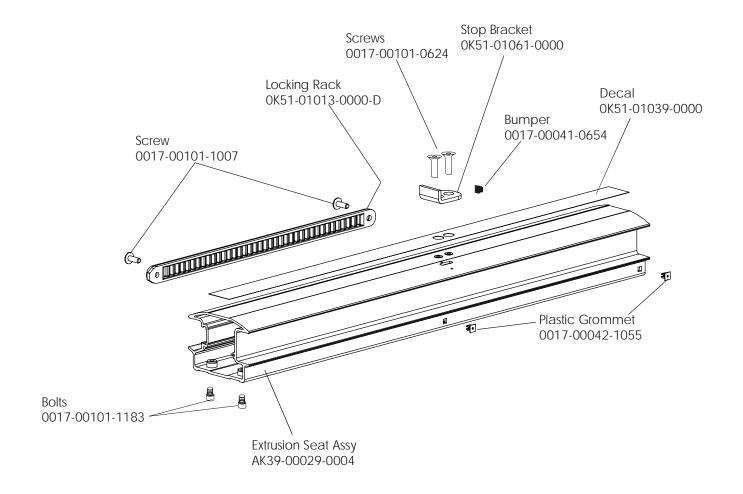

Lock Assembly AK51-00053-00000

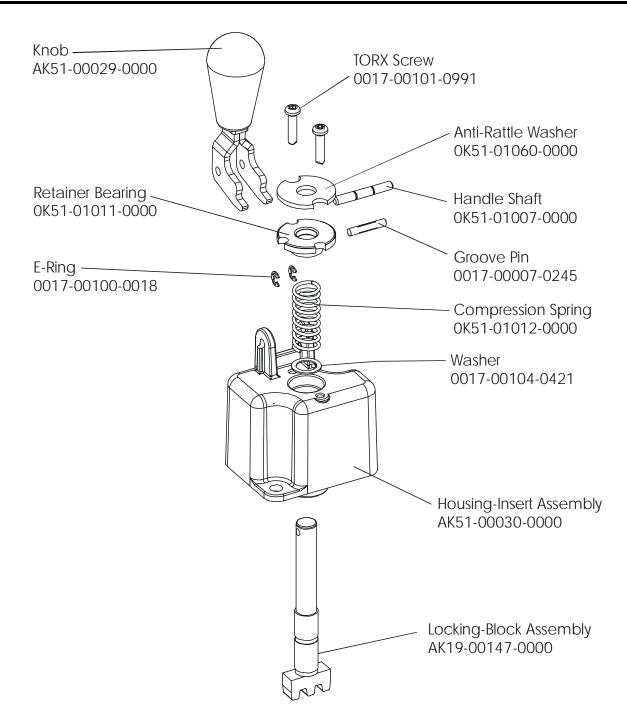

Cable - Block Assembly

